



# RC SKYWING



[Home](#) / Instructions

## 101 "-104" FULL BUILD MANUAL (安装手册)



Product description

**The contact surface of glue is rough**  
**(胶水接触表面打磨粗糙)**





**Servo installation (安装伺服舵机)**

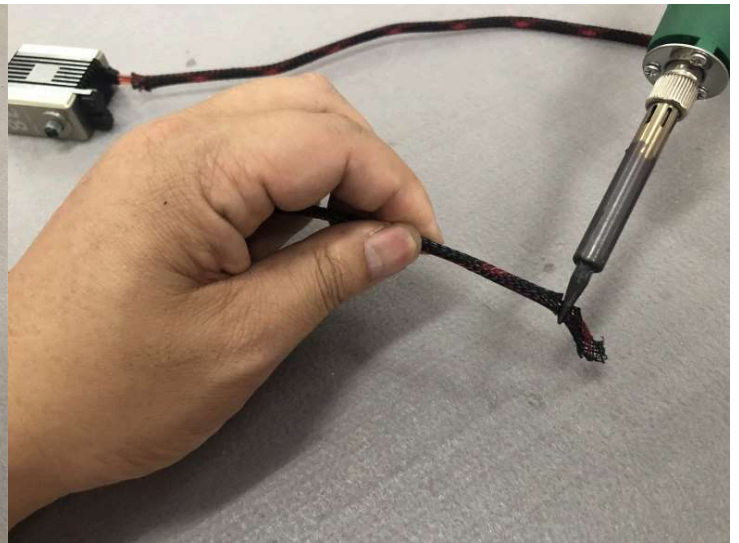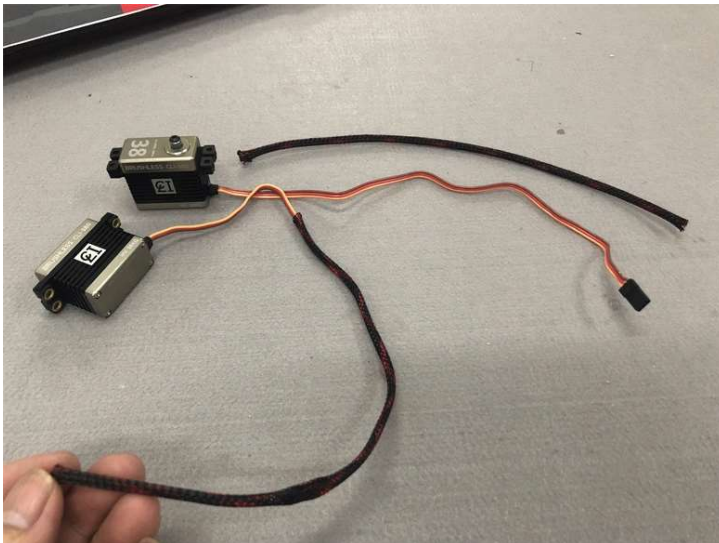






**Rudder has 3 installation options**

**方向舵3种安装选择**

**NO;1**

**Two servos in front**

**(2个舵机装前面)**

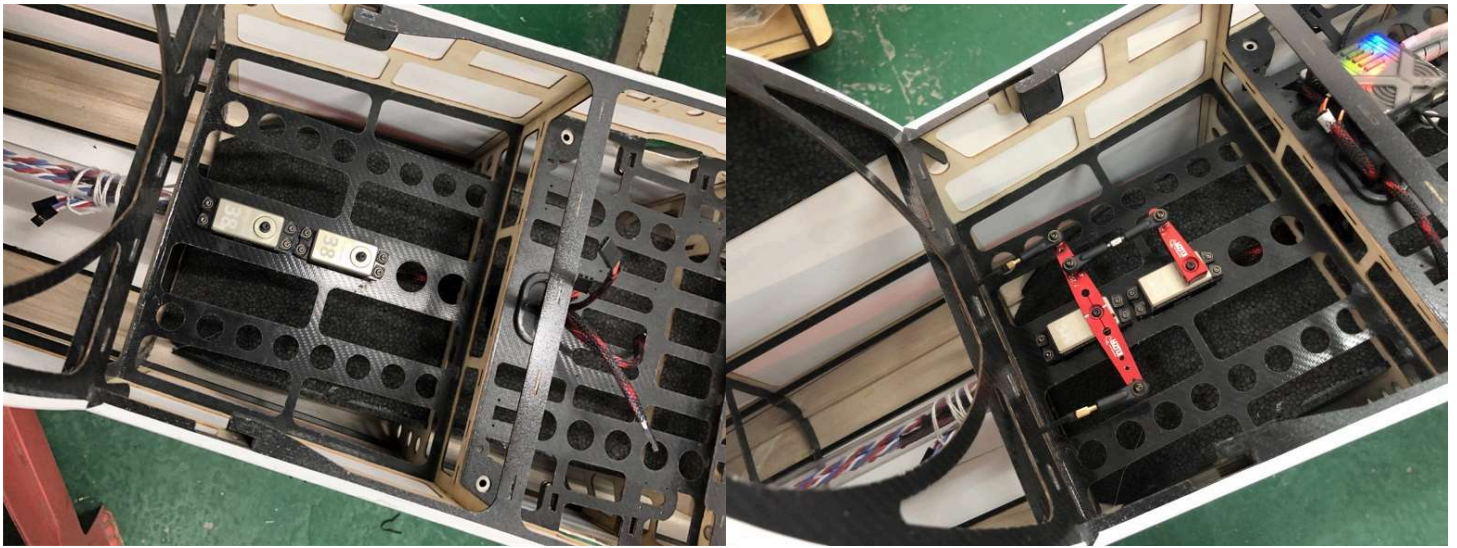

NO;2

One servo in the tail

(1个舵机在尾部)



NO;3

Two servos in the tail

(2个舵机在尾部)





**Install the lifting bracket**

**安装起落支架**







**Rudder installed**  
可拆方向安装



**Engine and fuel tank installation**  
引擎与燃料箱安装












Schematic diagram of power interface  
电源接口示意图

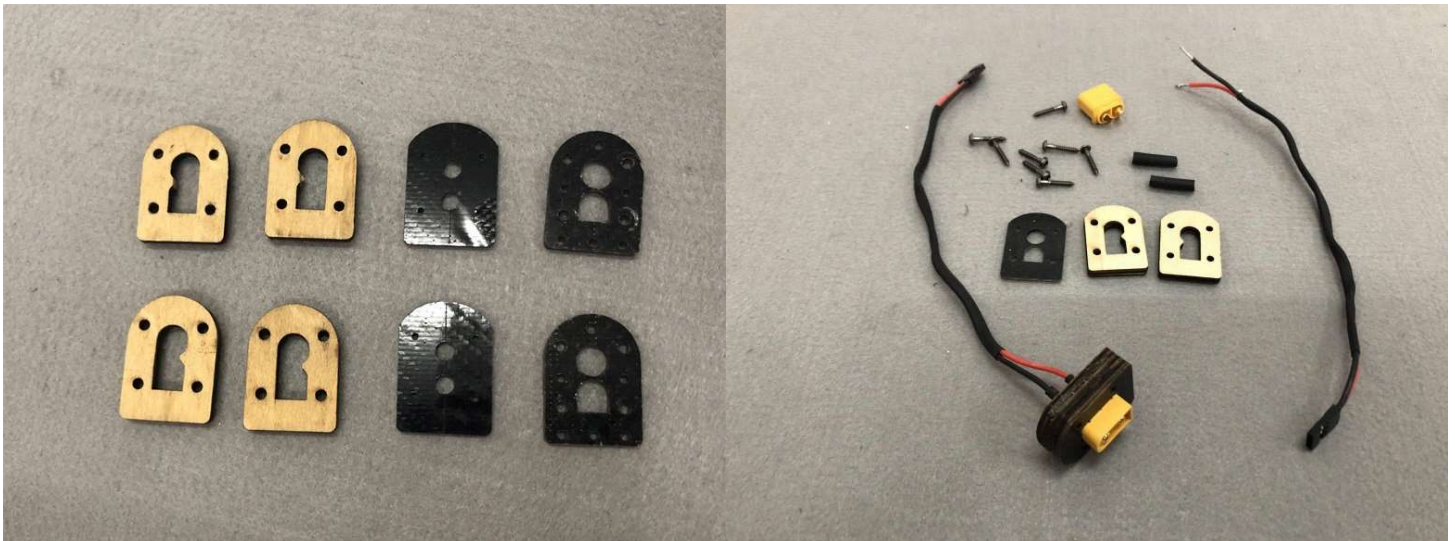



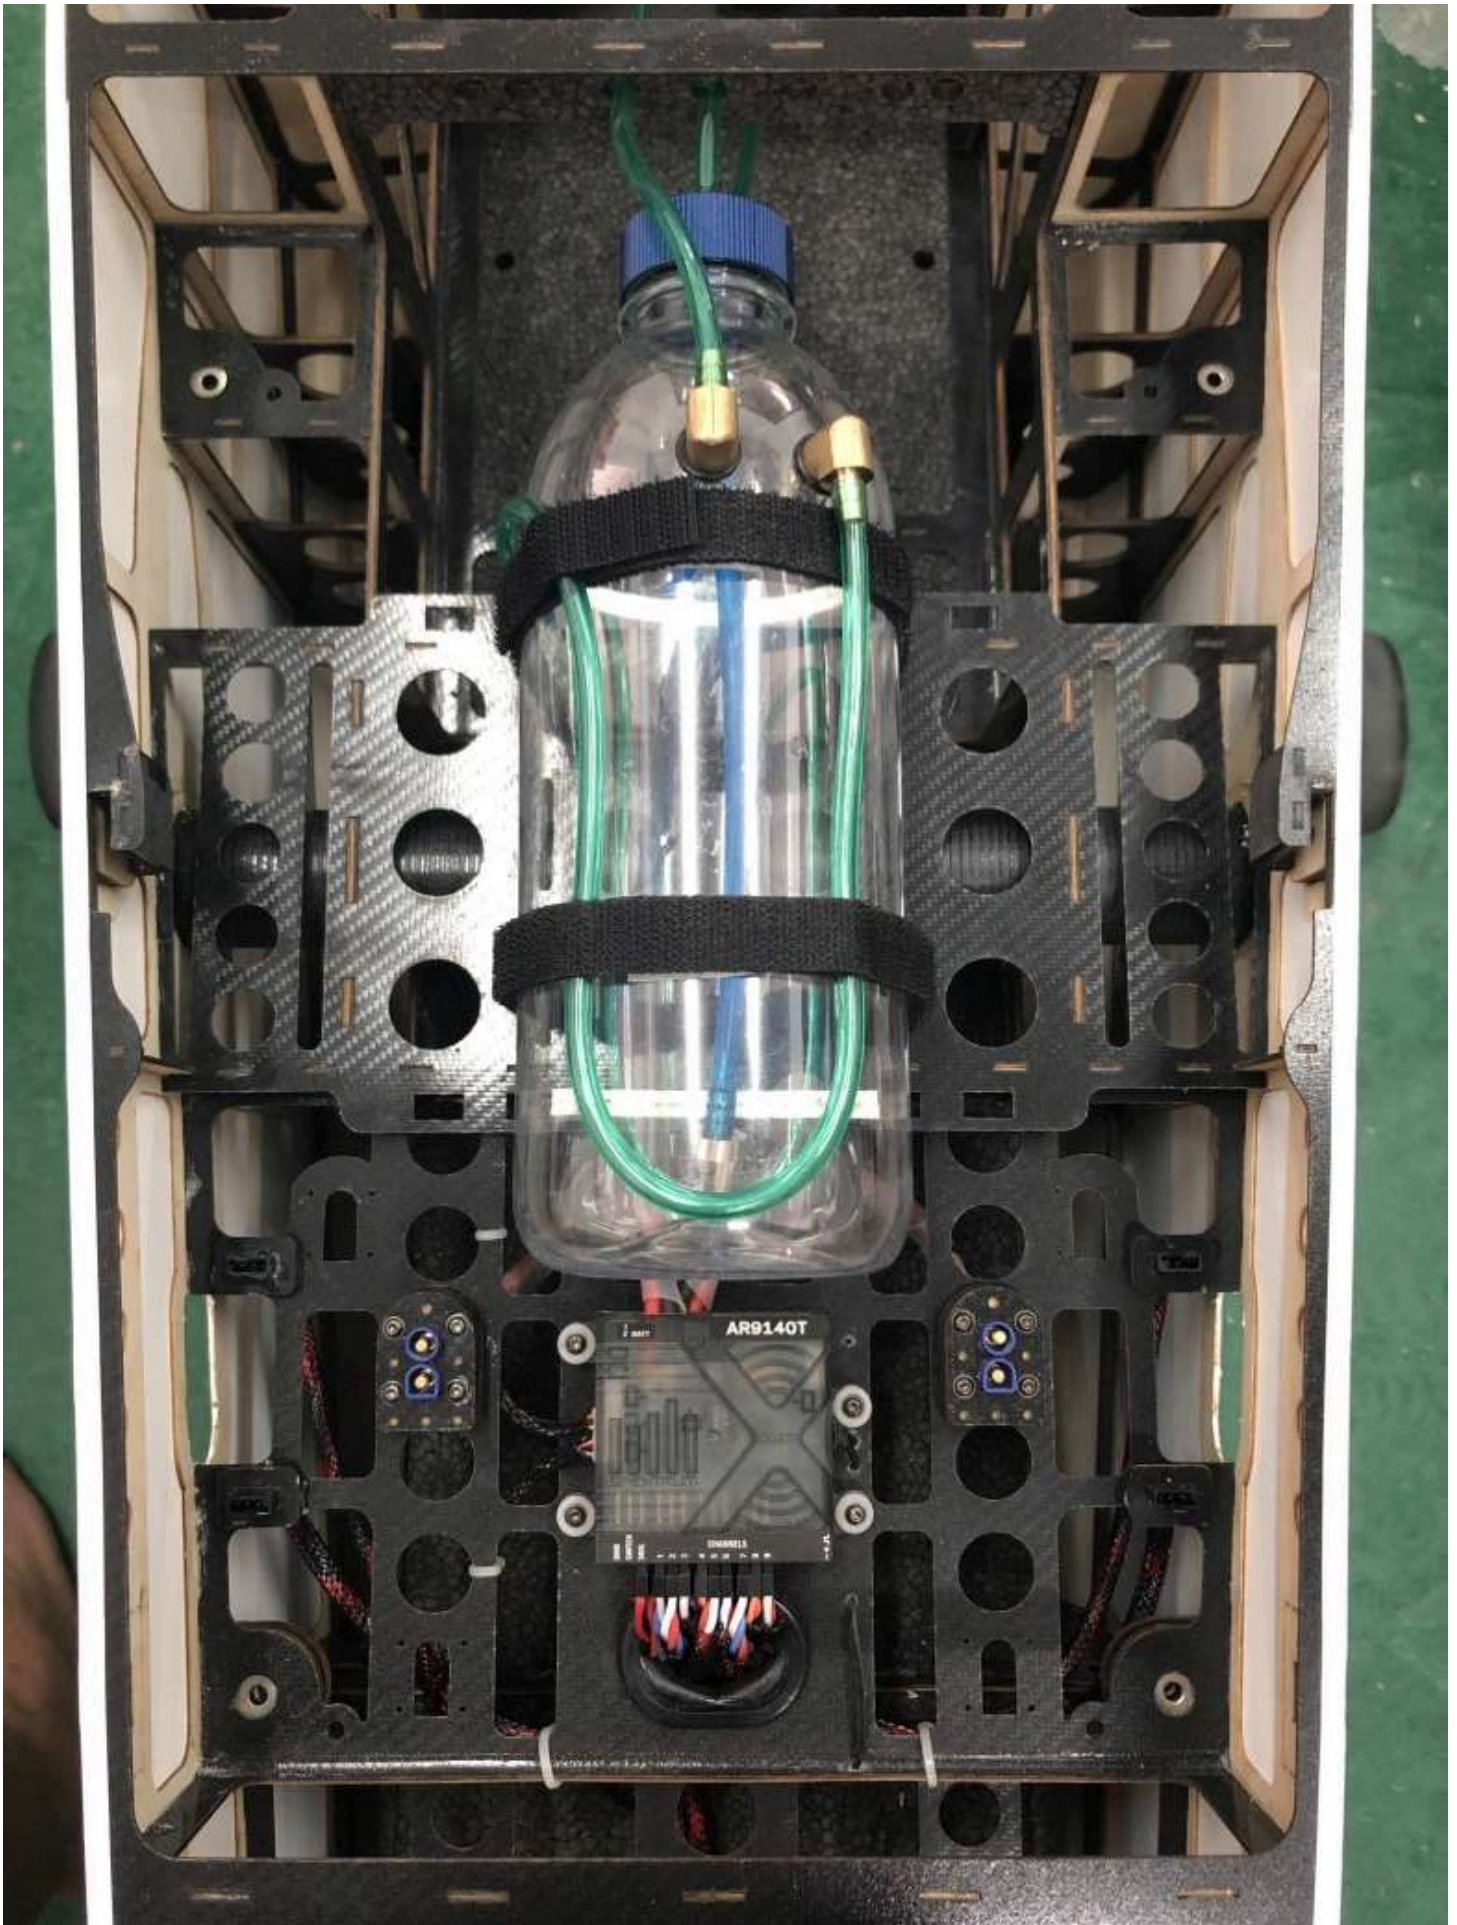



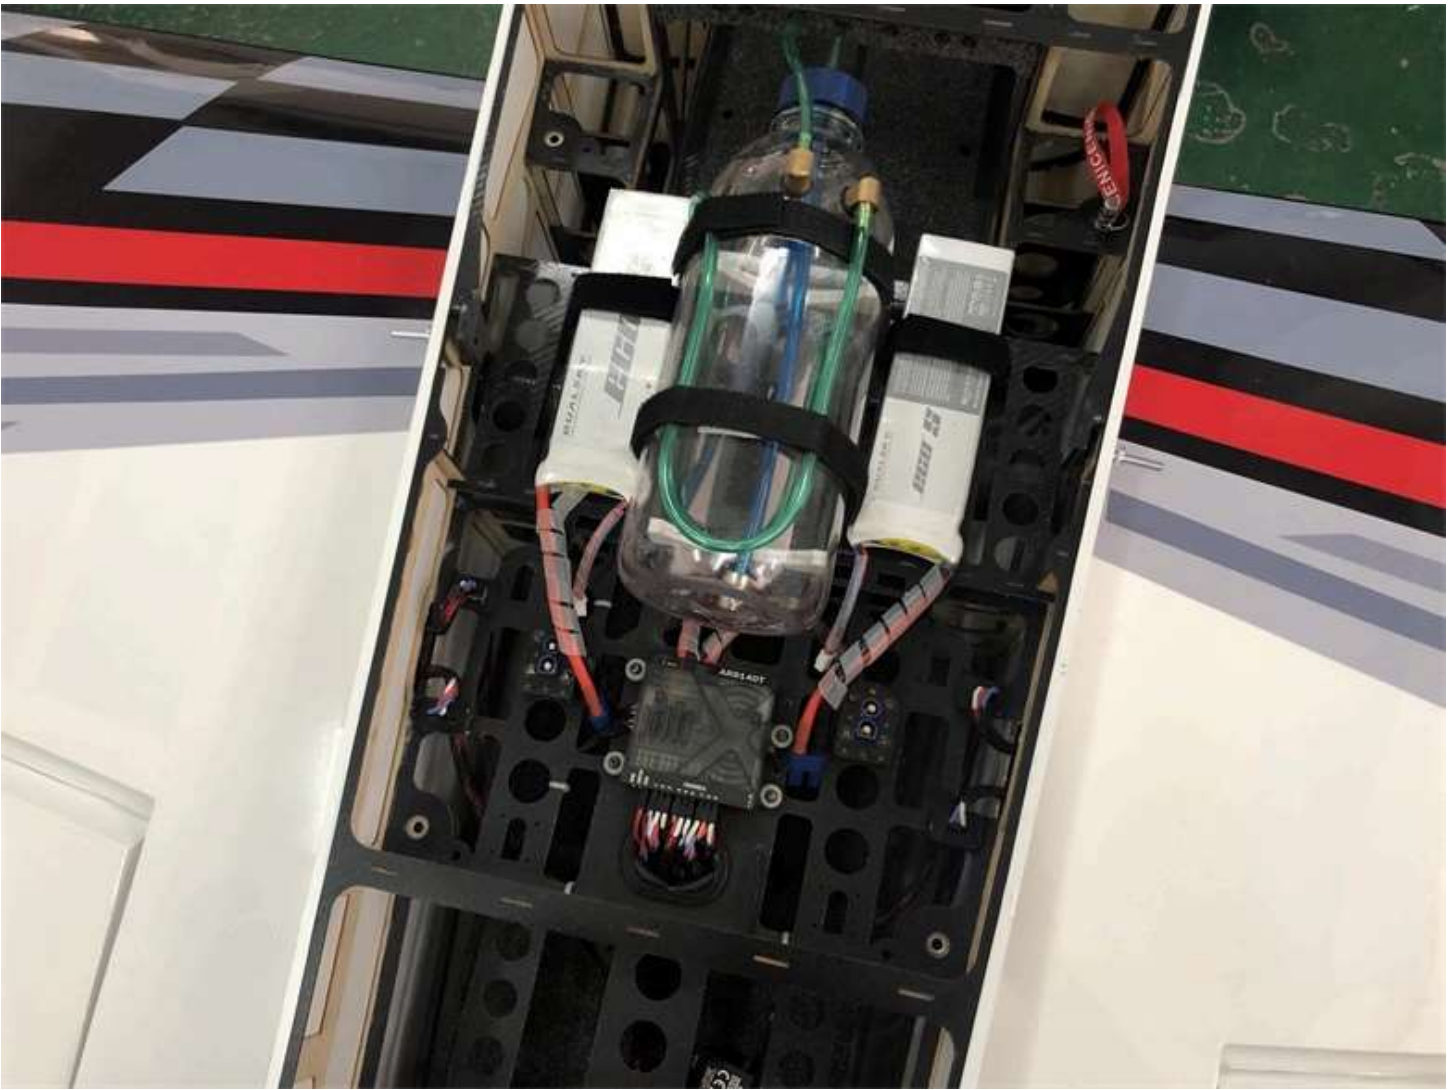


Prop chassis drilling, please pay attention to the chassis and spinner and prop outlet match

桨座底盘钻孔，请注意配合好桨和桨罩开口，确认再打孔！



Tire support  
轮胎支撑件



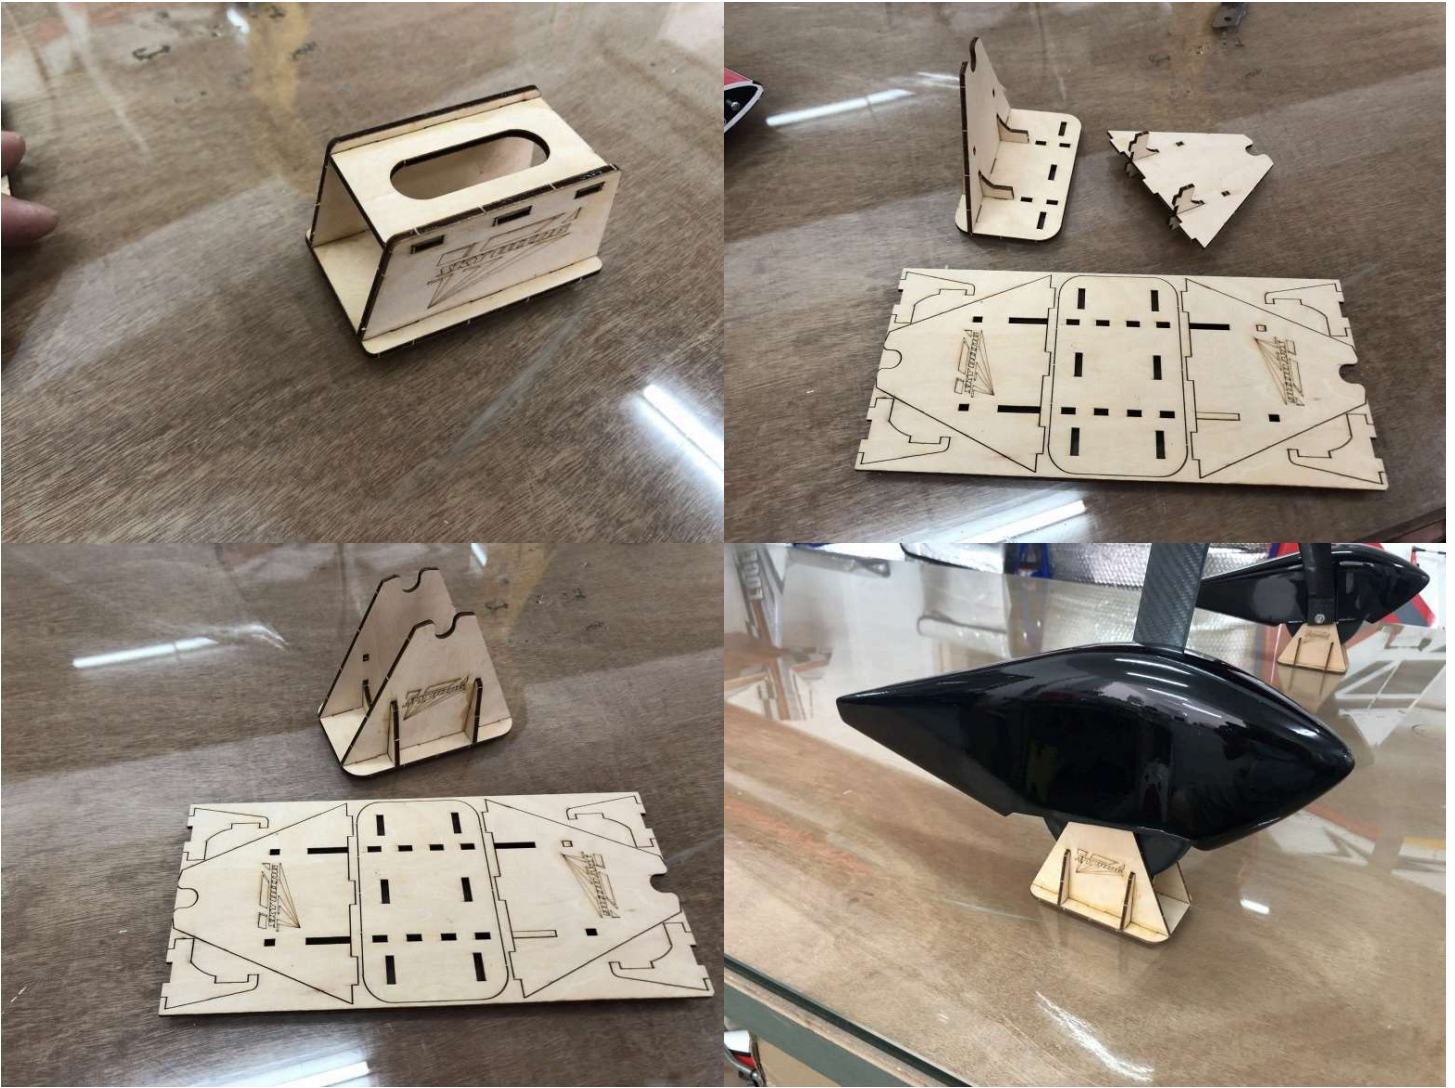

**CG is in the center of the pipe(重心在管子正中心)**

This position of center of gravity is for reference only, please choose the appropriate position according to your flying habits

(此重心位置仅供参考，请根据自己飞行习惯来选择合适自己的位置)

©2024 RC SKYWING MODEL all rights reserved